

INSTALLATION GUIDE

HVS-2000-2SI-associated Fan Unit Replacement

1st Edition

Upon Receipt

HVS-2000-2SI is a software option that allows you to use 4K-2SI mode in the HVS-2000.

If HVS-200-2SI software is installed in the HVS-2000, the fan units need to be replaced. (Fan units are included with HVS-2000-2SI software.)

This installation guide explains how to replace front and rear fan units in an HVS-2000.

Features

- 1080/59.94p and 1080/50p are supported in 4K 2SI signal input/output.

Check your received items against the packing list below. Check to ensure no damage has occurred during shipment. If damage has occurred, or items are missing, inform your supplier immediately.

◆ HVS-2000ME

ITEM	QTY	REMARKS
Front fan unit	1	Installation of two fans
Rear fan unit	1	Installation of four fans
Screws	6	Used to install fan units
Installation guide	1	This guide

 


Fan unit replacement should only be done by qualified technical personnel. Before installing cards, turn the HVS-2000 power OFF and unplug the power cords.

1. Replacing Fan Units


◆ Replace the Front Fan Unit

(1) Release the two screws on both sides securing the front panel to remove the panel.

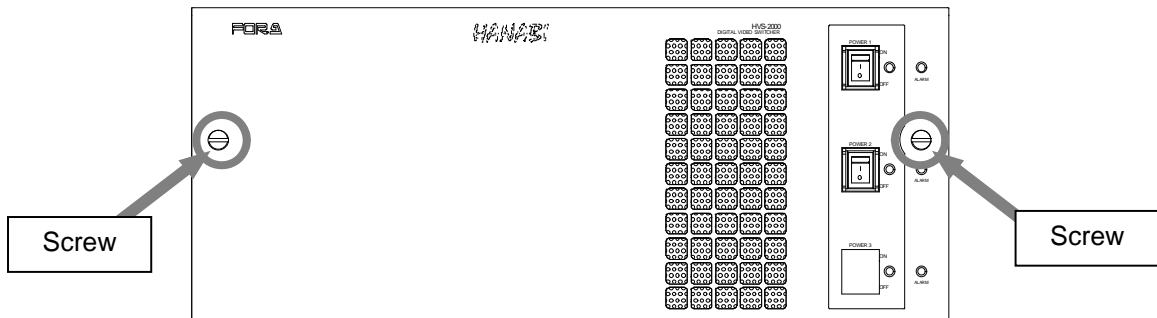

(2) Remove the two screws on the left, front fan unit.

 (3) Hold and pull the fan unit handle out.

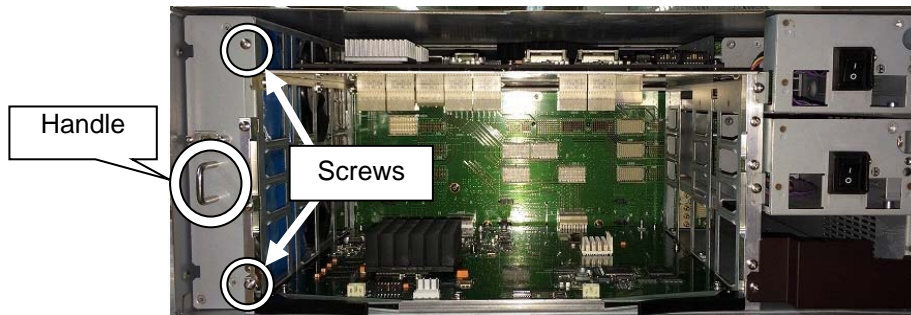


(4) Insert a new front fan unit into the slot until it locks in place.

(5) Tighten the two screws on the fan unit.

(6) Tighten the two screws on both sides to secure the front panel to the chassis.

◆ **Replace the rear fan unit**

 - (1) Remove the four screws on the right, rear fan unit.
- (2) Hold and pull the fan unit handle out.

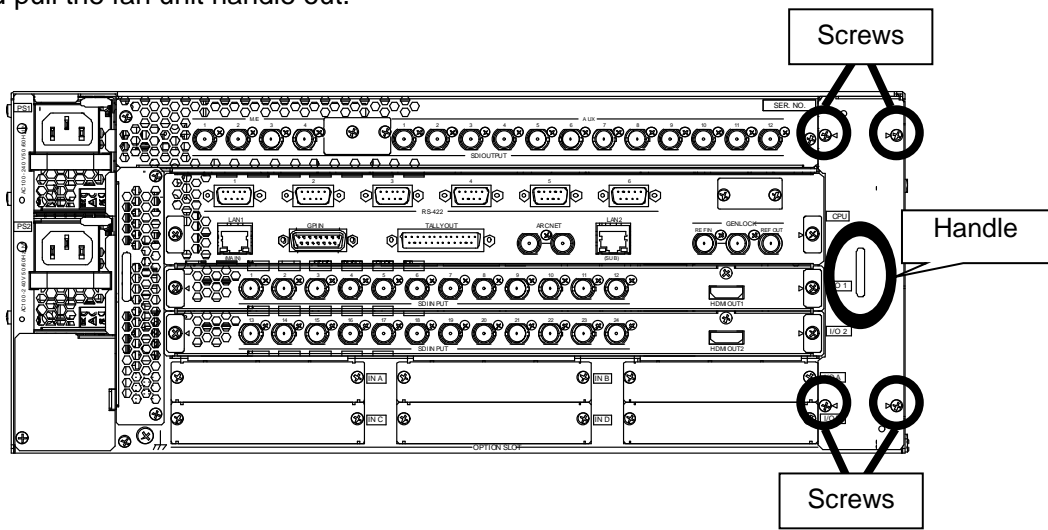

- (3) Insert a new rear fan unit into the slot until it locks in place.
- (4) Tighten the four screws on the fan unit.

2. Checking the Menu

Connect power cords and power ON the switcher system. Check that the fan units have been properly replaced.

- ① Open [**STATUS > ALARM**] menu.
- ② Check that "**NORMAL**" is displayed for **FAN1** to **FAN4**. (See the figure below.)





FOR-A COMPANY LIMITED

Head Office 3-8-1 Ebisu, Shibuya-ku, Tokyo 150-0013, Japan
Overseas Division Tel: +81(0)3 3446 3936 Fax: +81(0)3 3446 1470
Japan Branch Offices Osaka/Okinawa/Fukuoka/Hiroshima/Nagoya/Sendai/Sapporo
R&D/Production Sakura Center/Sapporo Center

FOR-A Corporation of America

11155 Knott Ave., Suite G&H, Cypress, CA 90630, USA.
Tel: +1 714 894 3311 Fax: +1 714 894 5399

FOR-A Corporation of America East Coast Office

2 Executive Drive, Suite 670, Fort Lee Executive Park, Fort Lee, NJ 07024, USA
Tel: +1 201 944 1120 Fax: +1 201 944 1132

FOR-A Corporation of America Distribution & Service Center

2400 N.E. Waldo Road, Gainesville, FL 32609, USA
Tel: +1 352 371 1505 Fax: +1 352 378 5320

FOR-A Corporation of America Miami Office

8333 North West 53rd Street Suite 427 Doral, FL 33166, USA
Tel: +1 305 931 1700 Fax: +1 714 894 5399

FOR-A Corporation of Canada

1131A, Leslie Street Suite 209, Toronto, Ontario M3C 2J6, Canada
Tel: +1 416 977 0343 Fax: +1 416 977 0657

FOR-A Europe S.r.l.

Via Volturmo 37, 20861 Brugherio MB, Italy
Tel: +39 039 91 64 811 Fax: +39 039 878 140

FOR A UK Limited

Trident Court, 1 Oakcroft Road, Chessington, KT9 1BD, UK
Tel: +44 (0)20 3044 2935 Fax: +44(0)20 3044 2936

FOR-A Italia S.r.l.

Via Volturmo 37, 20861 Brugherio MB, Italy
Tel: +39 039 881 086/103 Fax: +39 039 878 140

FOR-A Corporation of Korea

1007, 57-5, Yangsan-ro, Yeongdeungpo-gu, Seoul 150-103, Korea
Tel: +82 (0)2 2637 0761 Fax: +82 (0)2 2637 0760

FOR-A China Limited

708B Huateng Building, No. 302, 3 District, Jinsong, Chaoyang, Beijing 100021, China
Tel: +86 (0)10 8721 6023 Fax: +86 (0)10 8721 6033

FOR-A Middle East-Africa Office

Dubai Media City, Aurora Tower, Office 1407, P.O. Box 502688, Dubai, UAE
Tel: +971 (0)4 551 5830 Fax: +971 (0)4 551 5832

Agiv (India) Private Limited (FOR-A India)

2nd Floor, Valecha Chambers, Link Road, Andheri(W), Mumbai 400053
Tel: +91-22-26733623 Fax: +91-22-26393415