


MFR-31TBAR

Setup Guide: Installing the T-bar onto the Panel

No. Item

- (1) Panel (MFR-310U)
- (2) T-bar (MFR-31TBAR)
- (3) Bracket A for Panel (Marked as A)
- (4) Bracket B for T-bar (Marked as B)
- (5) Binding screws: (White, Large) x 4
- (6) Binding screws: (White, Small) x 4

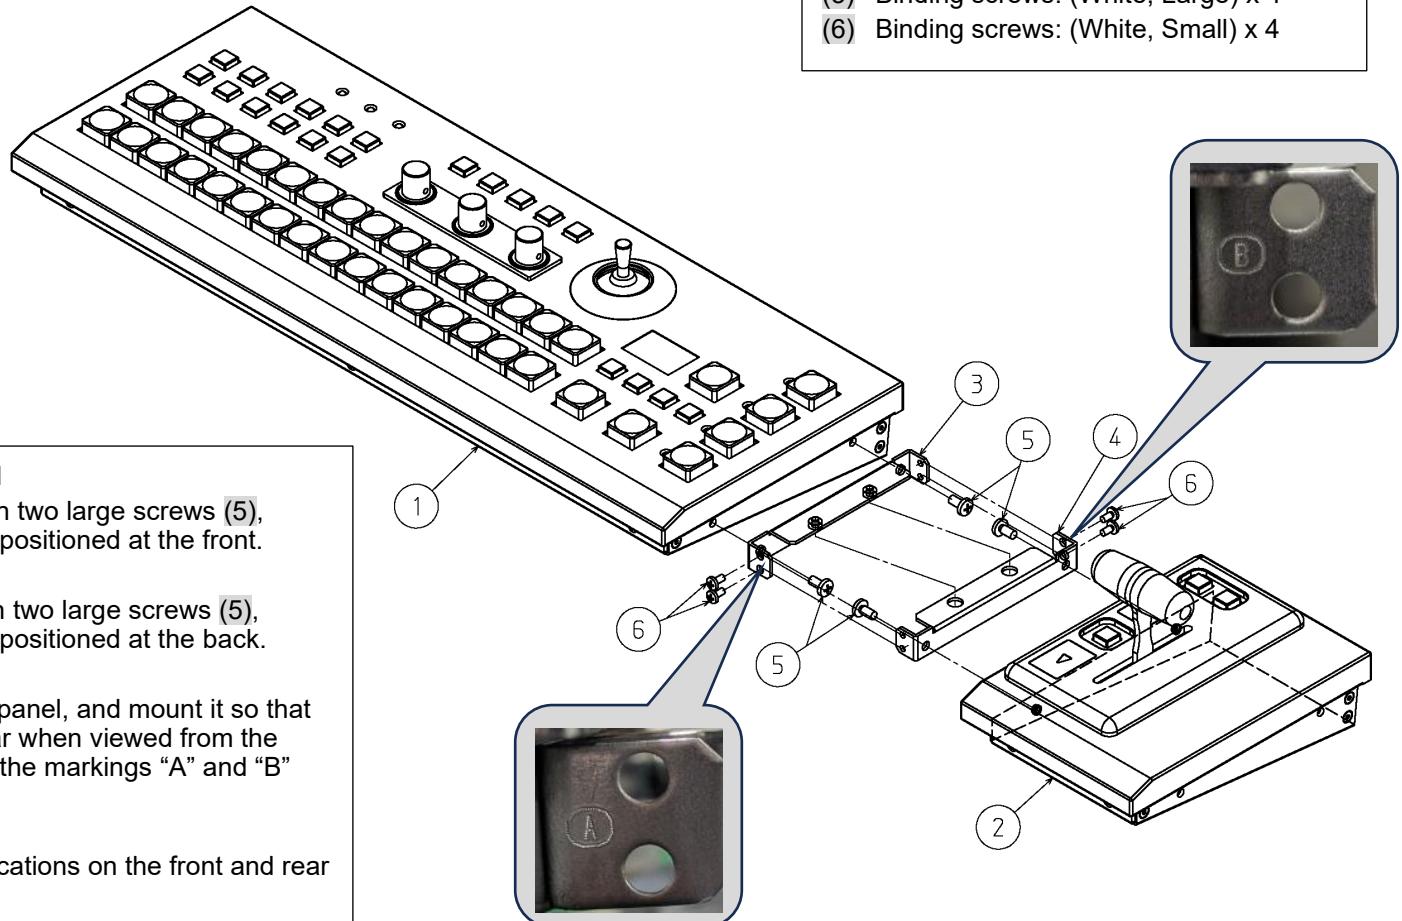

How to install the T-bar onto the panel

1. Attach Bracket A (3) to Panel (1) with two large screws (5), ensuring that the side marked "A" is positioned at the front.
2. Attach Bracket B (4) to T-bar (2) with two large screws (5), ensuring that the side marked "B" is positioned at the back.
3. Insert the T-bar from the side of the panel, and mount it so that Bracket B (4) is positioned at the rear when viewed from the front. Overlap the two plates so that the markings "A" and "B" remain visible.
4. Fix the connected brackets at two locations on the front and rear sides using small screws (6).

You can download manuals and other documents by registering your email address.

<https://www.for-a.com/>

